

# FLORENZ

ELECTRIC HEATING UNIT



Item no. 4923830

EN

INSTRUCTIONS FOR USE

**CONTENTS**

<b>ABOUT THIS PRODUCT</b>	<b>2</b>	<b>TECHNICAL SPECIFICATIONS</b>	<b>6</b>
<b>WARNINGS /SAFETY INSTRUCTIONS</b>	<b>3</b>	<b>DISPOSAL</b>	<b>6</b>
<b>OPERATION</b>	<b>5</b>	<b>WARRANTY/SERVICE</b>	<b>7</b>
<b>MAINTENANCE/STORAGE/CARE</b>	<b>6</b>		

**ABOUT THIS PRODUCT**

**Congratulations on purchasing this Enders product!**

Read and observe these instructions before and during use. Only use the product as described in these instructions, to prevent accidental injury or damage.

Keep these instructions for future reference. If the item is given to someone else, please include these instructions.

**We hope you enjoy using your Enders product.**

**WARNINGS/SAFETY INSTRUCTIONS**

Please read these instructions carefully before using your new heating unit for the first time.

- Make sure the heater component is free of all packaging material.
- Place the heating unit on an even surface.



- The heating unit becomes hot during use. Do not touch the hot surface of the heating unit and keep it at least 1 m away from all flammable substances.
- Ensure particular care is taken when using the heating unit near children.
- The heating unit must not be left unattended while in use.
- Always disconnect the mains plug when the heating unit is not in use.
- CAUTION: Some parts of the heater can get very hot and cause burns. Any children or persons requiring care present must be very closely supervised.
- Do not use the heating unit, if the plug or the power cable are damaged or if the device is malfunctioning.
- Do not use the heating unit in bathrooms, showers or in any area immediately next to a swimming pool.
- When turning the heater off, always ensure that the dial is set to the "0" (OFF) position. Never disconnect the unit by pulling on the cable; instead pull the plug out of the socket.
- Do not allow any foreign objects to enter into the heating unit as these may cause an electric shock or pose a fire risk.
- To avoid the risk of fire, do not place any objects on or over the heater.
- Do not use in any locations where highly flammable substances, e.g. petrol or paint, are stored.
- Only use the heating unit for its intended purpose of heating.


- The heater must not be used directly beneath a plug socket. Ensure that the device has completely cooled down before storing it.
- Children must not be allowed to play with the device.
- If the power cord of this device is damaged, it must be replaced by the manufacturer, their service department or a similarly qualified person in order to avoid injuries.
- The device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and / or by persons lacking knowledge unless they are supervised by a person responsible for their safety or receive instruction on how the device is used.
- Children younger than 3 years of age must be supervised at all times. Children between 3 and 8 years of age may only switch the device on and off if it has been set up according to the instructions provided and if they have been instructed in the safe use of the device and are aware of the potential risks involved. Children between 3 and 8 years of age must not set up, adjust, clean or perform maintenance on the device. CAUTION: Some parts of the heater can get very hot and cause burns. Any children or persons requiring care present must be very closely supervised.
- Do not use the heating unit with a timer switch which automatically turns on the heater as this poses a fire risk if the heating unit is covered or positioned incorrectly.
- The heater is not fitted with a climate control device. Do not use the device in small rooms where there are individuals with limited mobility who are unable to leave the room on their own or to be continuously supervised. WARNING: Do not cover the heater to prevent it from overheating.
- This device is intended solely for domestic use and is not suitable for continuous operation.

## OPERATION

Connect the power cable with a 220-230 V, 10 A socket in a secure and dry location.



- The dial is used to switch on/off and control the settings of the device. (0) for OFF, (1) for 450 watts, (2) for 900 watts. When set to the last position (arrows), the oscillation function (approx. 60°) is also active.
- Although the heating unit is protected from splashes of water, do not use it in the rain.
- The plug should be disconnected from the socket after every use.
- The heater is fitted with an anti-tipping mechanism. If the heater tips over, it automatically switches off. Once the heater has been placed upright, it can be switched on again as normal. The anti-tipping mechanism must not be tampered with under any circumstances.

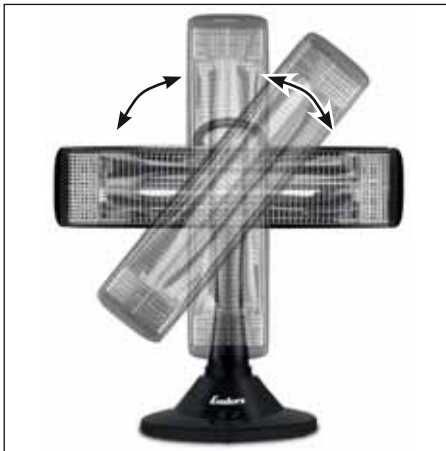

- When completely cool, the device can be adjusted both horizontally and vertically by 90°
- Additional oscillation function (approx. 60°)

## MAINTENANCE/STORAGE/CARE

- Once the heater has cooled down and has been disconnected from the power supply, the outer casing of the heating unit may be wiped down with a dry cloth.
- Never use corrosive or solvent products to do so.
- Any maintenance work, e.g. replacing the carbon rods, etc., should only be carried out by a qualified electrician.
- Store the heater in a dry room.

## TECHNICAL SPECIFICATIONS

Mains connection: 220-230 V, 50/60 Hz

Maximum wattage: 900 W

Protection type: IP24

CE IP24



www.tlv.com  
ID 1419042453

## DISPOSAL



This product contains reusable materials. Do not dispose of it along with your household waste; contact a local disposal company to have the device disposed of in an environmentally friendly manner.

**WARRANTY/SERVICE**

We grant a **2-year warranty** on the functioning of the product. The proper handling of the product and official proof of the date of purchase are required for the warranty to be applicable.

**The warranty expires at the end of the warranty period or immediately if you make any modifications to the product yourself.** No adjustments may be made to the device!

If, despite our quality checks, your product should be defective, please do not bring it back to the retailer but contact Enders directly. By doing so, we can ensure a quick processing of your complaint. Use the service form on our website for this purpose.

Service form:

**<http://www.enders-germany.com/de/service/>**

**Subject to colour variations and technical modifications for the purpose of product improvement.**

**Enders Colsman AG**

Brauck 1

58791 Werdohl, Germany

+49 2392 97 83 30